

Document #	TU-FURY5
Revision	1
Date	3/14/2025
Author	Omar Perdomo
Approved By:	Joshua Johnson

ALPHA FURY 5 & FURY 5 XLS HYDRAULIC SETTING TOOL

The Fury 5 and Fury 5 XLS Hydraulic Setting Tool, engineered to effortlessly set bridge plugs, cement retainers, and packers using the work string, production tubing, or coil tubing. Its versatile design eliminates the need for rotation, making it particularly suitable for coil tubing and horizontal applications. Simply circulate the ball down to the Fury HST, apply the required pressure from the surface, and disconnect. The tubing will automatically drain as it comes out of the hole.

Applications:

Designed to run and set the Alpha Big Boy™ Bridge Plugs and Ball Check Cement Retainer then squeeze or spot cement in two-trip.

Part Numbers	
060-1750-200	Fury 5 Hydraulic Setting Tool (BAKER connection)
060-1750-201	Fury 5 XLS Hydraulic Setting Tool (BAKER connection)
060-1750-202	Fury 5 XLS Hydraulic Setting Tool (G.O connection)

CEMENT RETAINERS AND BRIDGE PLUGS

Big Boy™ Bridge Plug	
Bridge Plug	Setting Sleeve
000-1710-002	000-1710-200
000-2100-002	000-2100-200
000-2500-002	000-2500-200
000-2750-002	000-2750-200

Ball Check Cement Retainer		
Cement Retainer	Setting Sleeve	Stinger Locator
004-1710-002	000-1710-200	016-1710-070
004-2100-002	000-2100-200	016-2100-070
004-2500-002	000-2500-200	016-2100-070
000-2750-002	000-2750-200	016-2100-070
000-2750-003	000-2750-200	016-2100-070

Extra Range Bridge Plug (for FURY 5 XLS G.O.)	
Bridge Plug	Setting Sleeve
001-1750-000	000-1750-100
001-1906-000	001-1906-100
001-2187-000	001-2187-101
001-2281-101	001-2187-101

Big Boy™ Bridge Plug (for FURY 5 XLS G.O.)	
Bridge Plug	Setting Sleeve
000-1710-000	000-1710-101
000-2100-000	000-2100-101
000-2500-000	000-2500-101
000-2750-000	000-2750-101



FURY 5 Hydraulic
Setting Tool
illustration

Document #	TU-FURY5
Revision	1
Date	3/14/2025
Author	Omar Perdomo
Approved By:	Joshua Johnson

GENERAL INFORMATION


1. Use a casing scraper before running any equipment in the well to remove scale and other materials from the casing wall. Any tool that is expected to grip the casing wall has to first reach the casing wall.
2. Circulate the well to clean the well of debris and junk.
3. Drift the casing ID 80-100 feet below setting depth with a full OD gage ring and junk basket to ensure no restrictions or debris exist.
4. Use the correct Sleeve Valve Cement Retainer for the temperature, pressure, casing size, casing weight and environment.
5. Casing should have 100% cement bond before running the cement retainer in the well.
6. Never set the retainer in a casing collar or a location where milling has occurred.
7. Always set the retainer in static well conditions (no fluid or gas movement).
8. When perforating, the cement retainer should be protected with a minimum of ten feet of cement dumped directly on top of the retainer. Cement should be given sufficient time to harden before perforating.
9. Perforating should not be done closer than fifty feet of cement retainer without putting a minimum of 10 ft. of hard cement on top of retainer.

FIELD ASSEMBLY PROCEDURE

STEP 1: Place the FURY 5 setting tool in vise at the top sub. Place a steady rest under the Lower Connector for support.



STEP 2: Install and screw Setting Sleeve on Bottom Adapter Sleeve. Install (2) ¼-20x250 set screw on Setting Sleeve.

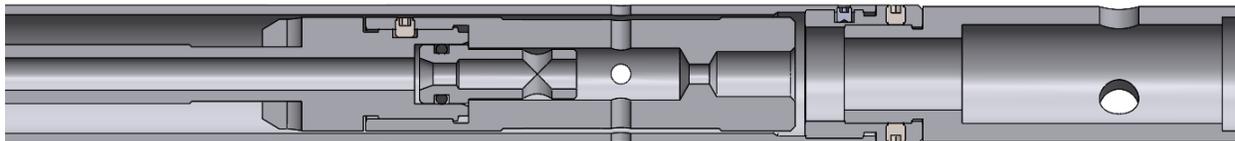

STEP 3: Align Plug/Retainer Body with the Setting Tool Bottom Adapter Sub then screw the Retainer on setting tool. Screw Retainer until Setting Sleeve touches Lock Ring Back up. Support Cement Retainer with steady rest.

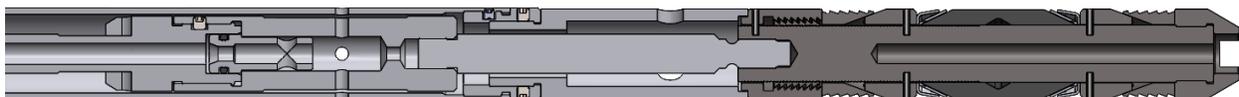


Illustration with 1710 Big Boy™ Bridge Plug.

Document #	TU-FURY5
Revision	1
Date	3/14/2025
Author	Omar Perdomo
Approved By:	Joshua Johnson


OPERATION PROCEDURE

1. Run the Alpha Fury 5 Hydraulic Setting Tool and BP/CR several feet below the setting depth. Note: The Fury circulation ports are located below the ball seat. These ports will allow the tubing to fill going in the hole or for circulating a maximum rate of ¼ BPM while going in the hole. Well fluid must clean and free of debris (sand) for the HST to work properly. Warning: The setting sequence will begin at 1,000 psi differential pressure in the tubing “at the tool” (see step 4).

2. Pick up slowly to setting depth to remove slack from tubing string.



3. Drop a 3/8” diameter brass ball and slowly pump down until it has seated (pressure increase).

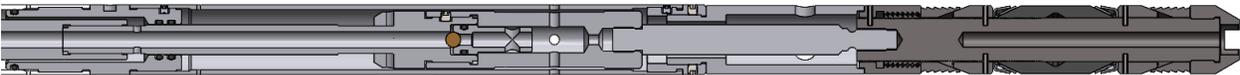


4. Slowly pressure workstring to establish a 1,000 psi (1,500 psi max) differential pressure inside the tubing “at the tool” to begin the setting sequence.

5. Continue pressuring workstring to establish a 2,500psi differential pressure inside the tubing “at the tool” to anchor the BP/CR against the casing wall. Pick up tubing to the neutral position. Hold pressure for 5 minutes.




6. Continue pressuring workstring to establish a 3,100 psi (3,600 psi max) differential pressure inside the tubing “at the tool” to complete the set. Pick up on tubing to determine if disconnected from BP/CR. If the HST has not disconnected from BP/CR then Pick up 1,000 pounds over tubing weight and pressuring workstring again to establish 3,100 psi (3,600 psi max) inside the tubing “at the tool” to complete set. Over pressuring HST will cause damage to tool.

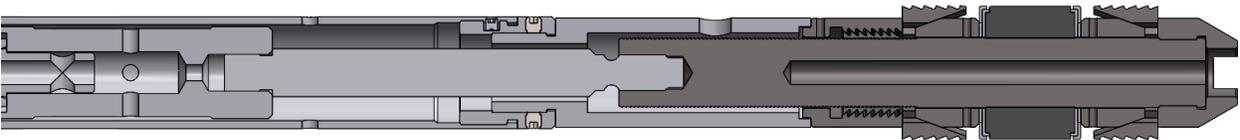

7. Apply 1,000 pounds of set down weight to determine if BP/CR is securely set.

Document #	TU-FURY5
Revision	1
Date	3/14/2025
Author	Omar Perdomo
Approved By:	Joshua Johnson

8. The Fury 5 HST will automatically dump pressure when fully stroked out. Clean and re-dress Hydraulic Setting Tool and Setting Adapter Kit.

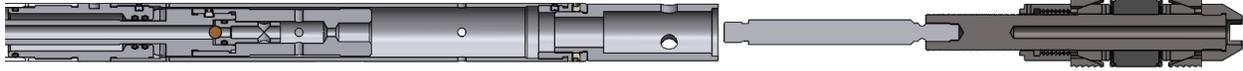

TROUBLESHOOTING:

If HST does not disconnect from BP/CR.

Pull 1,000 pounds over tubing weight and pressure workstring again to establish a 3,100 psi (3,600 psi max) inside the tubing “at the tool” to disconnect from BP/CR.

If unsuccessful, then bleed off pressure, return tubing to the neutral point and reverse circulate capacity of the tubing (+10 BBL) to remove debris that may be inside the tubing and tool. Circulate Ball back to the Ball Seat then pull 1,000 pounds over tubing weight and pressure workstring again to establish a 3,100 psi (3,600 psi max) inside the tubing “at the tool” to disconnect from BP/CR.

If unsuccessful, then bleed off pressure and pull 12,000 pounds over tubing weight to disconnect from BP/CR. Over pressuring HST will cause damage to tool.


Document #	TU-FURY5
Revision	1
Date	3/14/2025
Author	Omar Perdomo
Approved By:	Joshua Johnson

ASSEMBLY INSTRUCTIONS FOR FURY 5 HYDRAULIC SETTING TOOL

Anti-galling compound should be used on all threads. Downhole grease should be used on all O-rings. To avoid damage to parts, use a soft jaw vise and strap wrenches when tightening connections. Wrench on knurled areas or utilize spanner holes. File away wrench marks.

NOTE: Wrench tight means putting your weight on the end of a 24" pipe wrench. Screwdriver tight means hand tight with a medium blade 6" long screwdriver.


FURY 5 HYDRAULIC SETTING TOOL ASSEMBLY ILLUSTRATION

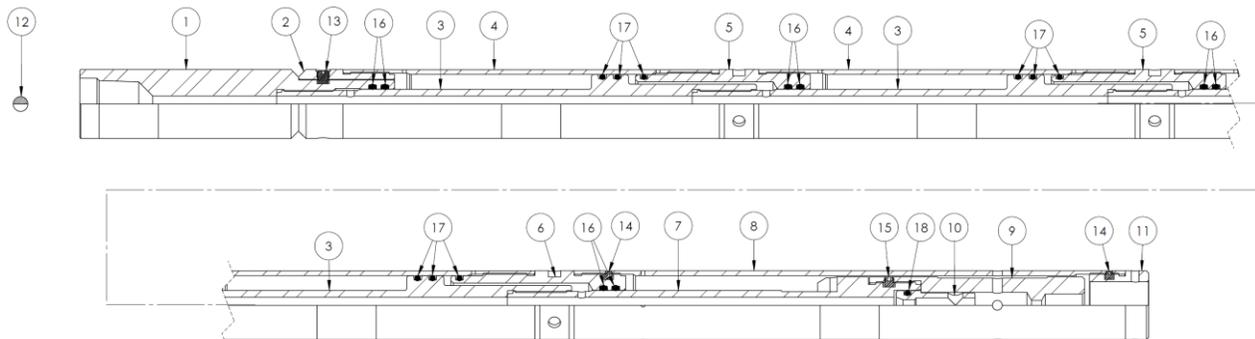

ITEM NO.	PART NUMBER	ALPHAPARTNAME	QTY.
1	019-1750-220	TOP SUB	1
2	019-1750-221	CYLINDER CAP	1
3	019-1750-223	PISTON	3
4	019-1750-222	CYLINDER	3
5	060-1750-225	LOWER CONNECTOR	2
6	060-1750-225	LOWER CONNECTOR	1
7	060-1750-227	BALL SEAT HOUSING	1
8	060-1750-226	PUSH SLEEVE	1
9	060-1750-235	BOTTOM ADAPTER SUB	1
10	060-1750-228	BALL SEAT	1
11	060-1750-232	BOTTOM ADAPTER SLEEVE	1
12	019-1750-236	.375 BRASS BALL	1
13	062-4500-127	SHEAR SCREW	2
14	10S32X187	10-32 X 3/16 SET SCREW	2
15	250S20X250	1/4 -20 X .25 SET SCREW	1
16	000-210N-070	210 O-RING	8
17	000-218N-070	218 O-RING	9
18	000-206N-090	206 O-RING	1

Document #	TU-FURY5
Revision	1
Date	3/14/2025
Author	Omar Perdomo
Approved By:	Joshua Johnson

FURY 5 XLS HYDRAULIC SETTING TOOL ASSEMBLY ILLUSTRATION

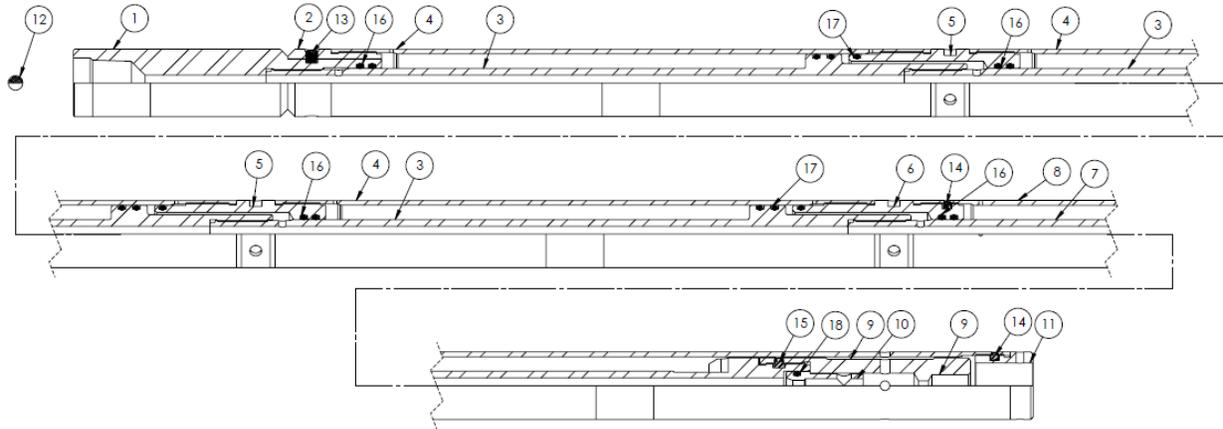

ITEM NO.	PART NUMBER	ALPHAPARTNAME	QTY.
1	019-1750-220	TOP SUB	1
2	019-1750-221	CYLINDER CAP	1
3	019-1750-253	PISTON	3
4	019-1750-252	CYLINDER	3
5	060-1750-225	LOWER CONNECTOR	2
6	060-1750-225	LOWER CONNECTOR	1
7	060-1750-257	BALL SEAT HOUSING	1
8	060-1750-256	PUSH SLEEVE	1
9	060-1750-235	BOTTOM ADAPTER SUB	1
10	060-1750-228	BALL SEAT	1
11	060-1750-232	BOTTOM ADAPTER SLEEVE	1
12	019-1750-236	.375 BRASS BALL	1
13	062-4500-127	SHEAR SCREW	2
14	10S32X187	10-32 X 3/16 SET SCREW	2
15	250S20X250	1/4 -20 X .25 SET SCREW	1
16	000-210N-070	210 O-RING	8
17	000-218N-070	218 O-RING	9
18	000-206N-090	206 O-RING	1

Document #	TU-FURY5
Revision	1
Date	3/14/2025
Author	Omar Perdomo
Approved By:	Joshua Johnson

**FURY 5 XLS GO
HYDRAULIC SETTING TOOL ASSEMBLY ILLUSTRATION**



ITEM NO.	PART NUMBER	DESCRIPTION	QTY.	ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	019-1750-220	TOP SUB	1	10	060-1750-107	LOCK NUT	1
2	019-1750-221	CYLINDER CAP	1	11	000-2100-101	SETTING SLEEVE	1
3	019-1750-253	PISTON	3	12	019-1750-236	.375 BRASS BALL	1
4	019-1750-252	CYLINDER	3	13	062-4500-127	SHEAR SCREW	2
5	060-1750-225	LOWER CONNECTOR	3	14	10S32X187	10-32 X 3/16 SET SCREW	1
6	060-1750-257	BALL SEAT HOUSING	1	15	250S20X250	1/4-20 X .25 SET SCREW	1
7	060-1750-258	SETTING SLEEVE	1	16	000-210N-070	210 O-RING	8
8	060-1750-228	BALL SEAT	1	17	000-218N-070	218 O-RING	9
9	060-1750-236	BOTTOM SUB	1	18	000-206N-090	206 O-RING	1


Document #	TU-FURY5
Revision	1
Date	3/14/2025
Author	Omar Perdomo
Approved By:	Joshua Johnson

FURY 5 & FURY 5 XLS HYDRAULIC SETTING TOOL ASSEMBLY STEPS

- Grease all threads and O-ring surfaces.
- Install O-rings (item 16) inside Top Sub (item 1). Place Top Sub in vise at box connection. Slide Cylinder Cap (item 2) on Top Sub. Install (2) Brass Shear Screws (item 13) in groove screwdriver tight then back-off 1/8 turn.



- Screw first Piston (item 3) with installed O-rings (item 17) in Top Sub wrench tight. Lubricate entire ID of first Cylinder (item 4) with Mobil Grease HP. Slide Cylinder (item 4) over Piston and screw to Cylinder Cap (item 2). Make strap wrench tight. Screw first Upper Connector (item 5) with installed O-Rings (item 16 & 17) in Cylinder and make spanner wrench tight.

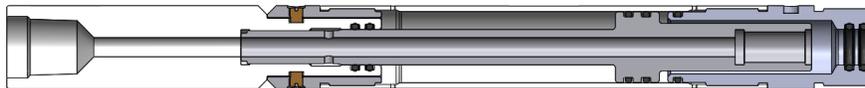


- Screw second Piston (item 3) with installed O-rings (item 17) in previous Piston wrench tight. Lubricate entire ID of second Cylinder (item 4) with Mobil Grease HP. Slide Cylinder (item 4) over Piston and screw to Upper Connector (item 5). Make strap wrench tight. Screw second Upper Connector (item 5) with installed O-Rings (item 16 & 17) in Cylinder and make spanner wrench tight.



- Screw third Piston (item 3) with installed O-rings (item 17) in previous Piston wrench tight. Lubricate entire ID of third Cylinder (item 4) with Mobil Grease HP. Slide Cylinder (item 4) over Piston and screw to Upper Connector (item 5). Make strap wrench tight. Screw Lower Connector (item 6) with installed O-Rings (item 16 & 17) in Cylinder and make spanner wrench tight. Note: The Lower Connector (item 6) differs from the Upper Connector (item 5) with a flat bottom spot face in the lower thread and the OD is knurled.



- Slide upper end of Ball Seat Housing (item 7) through Lower Connector (item 6) then screw to lower end of previous Piston wrench tight. Wrench at knurled area on Ball Seat Housing.

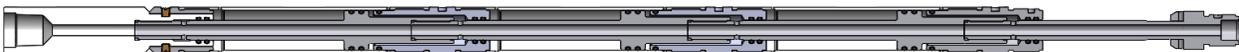

Document #	TU-FURY5
Revision	1
Date	3/14/2025
Author	Omar Perdomo
Approved By:	Joshua Johnson

- Internally test 3-hydraulic chambers with air to check for cut or missing O-rings. Temporally install solid ball seat (060-1750-248) in lower end of Ball Seat Housing (item 7). Screw Bottom Adapter Sub (item 9) on Ball Seat Housing (item 7) wrench tight. Wrench at knurled area on Ball Seat Housing. **Make sure Top Sub (item 1) is secure in pipe vise, tighten both brass shear screws (item 13) then connect air test fixture.** Make 1-1/4" MT connection wrench tight and close on/off valve. Connect air line, open on/off valve and allow air to fill HST, then close valve. If gage is steady for 2-minutes and no flow of air can be heard then HST is tested. If a steady air test cannot be achieved then HST must be disassembled to find the cause. Bled air pressure to zero and remove Bottom Adapter Sub (item 9) by placing a backup at knurled area on Ball Seat Housing. Remove Solid Ball Seat. Install Ball Seat (item 10) with installed O-ring (item 18) in lower end of Ball Seat Housing (item 7). Screw Bottom Adapter Sub (item 9) on Ball Seat Housing (item 7) wrench tight. Install Socket Head Set Screw (item 15).




- If it is desired to run HST with a solid seat "no ball" then install Optional Solid Seat (060-1750-248) in lower end of Ball Seat Housing.
- Screw Push Sleeve (item 8) to Lower Connector (item 6). Make spanner wrench tight. Install (1) Socket Head Set Screw (item 14).



- Screw Bottom Adapter Sleeve (item 11) to Push Sleeve (item 8). Make spanner wrench tight. Install (1) Socket Head Set Screw (item 14).



- Re-tighten Brass Shear Screws (item 13). Connect airline, open on/off valve and allow air to flow through HST to ensure the internal flow path is free and clear (no ball is in place). File away all wrench marks. Remove air test fixture.

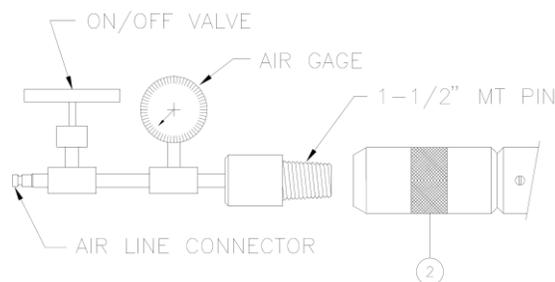




Document #	TU-FURY5
Revision	1
Date	3/14/2025
Author	Omar Perdomo
Approved By:	Joshua Johnson

DISASSEMBLY OF THE FURY 5 SETTING TOOL

1. Drain all well fluids from Hydraulic Setting Tool and dispose of properly. Place Top Sub (item 1) in pipe vise and close setting stroke gap between Top Sub (item 1) and Cylinder Cap (item 2) by pushing outer components upward towards pipe vise. Keep hands clear of this area during procedure.
2. Disassembly is basically the reverse operation of the assembly with the exception of the Pistons (item 3), Cylinders (item 4) and Connectors (item 5 & 6). Occasionally these items break at locations other than intended. If this occurs remove Lower Connector and slide down enough to place a wrench on the previous pistons knurled area.
3. Visually inspect each component for wear especially the Ball Seat area. Remove all O-rings and discard properly. Clean all parts thoroughly then re-assembly Hydraulic Setting Tool complete with new O-rings. Label outside of Hydraulic Setting Tool with the description, part number, ball size and type O-ring kit.

Document #	TU-FURY5
Revision	1
Date	3/14/2025
Author	Omar Perdomo
Approved By:	Joshua Johnson

FURY 5 HYDRAULIC SETTING TOOL DIMENSIONAL DATA

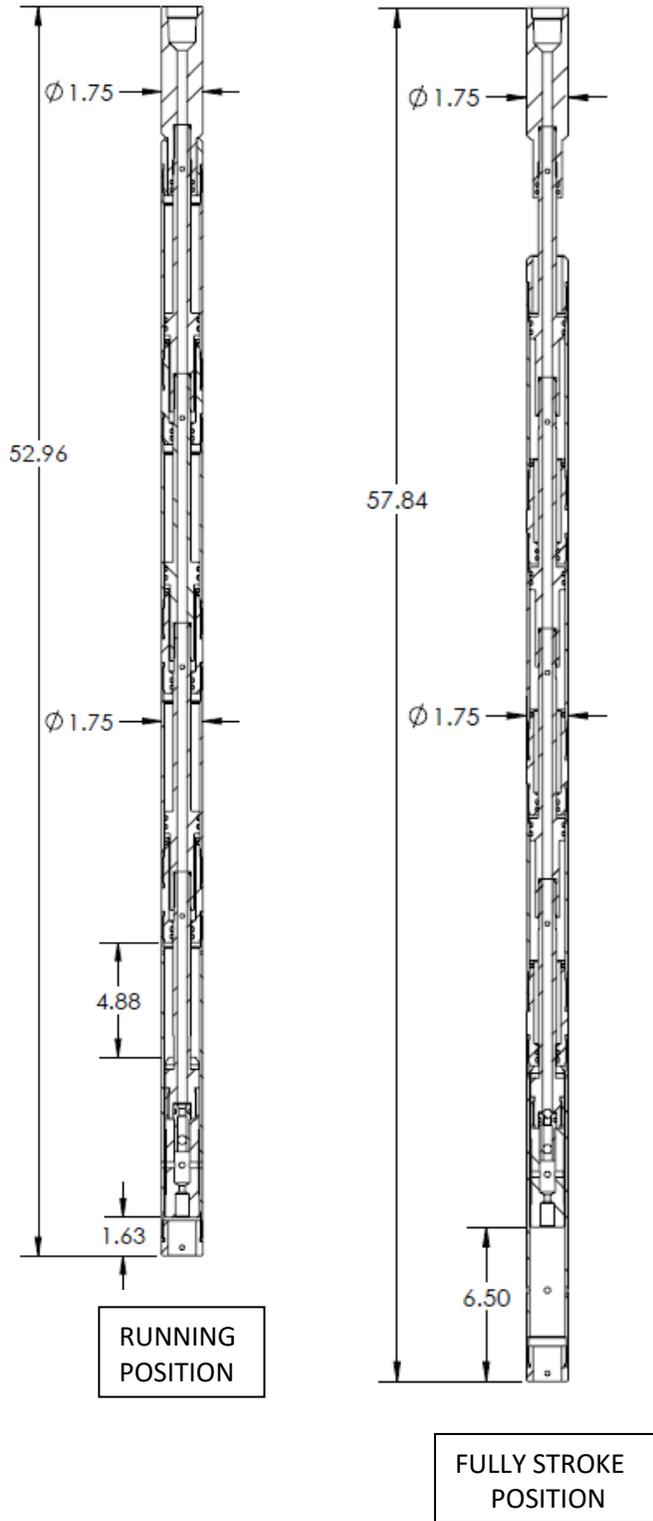

Document #	TU-FURY5
Revision	1
Date	3/14/2025
Author	Omar Perdomo
Approved By:	Joshua Johnson

FURY 5 XLS HYDRAULIC SETTING TOOL DIMENSIONAL DATA

